



Reset the Chip-set

If the printer tells you to replace the ink cartridges,

- 1- Please remove and refill the ink cartridge which is shown as empty.
- 2- Please use paper clips or any metal to short (touch) the 2 top golden dots over one second.
- 3- Re-install the ink cartridges.



Phone: 1300 213 589
02-8065 5614

