

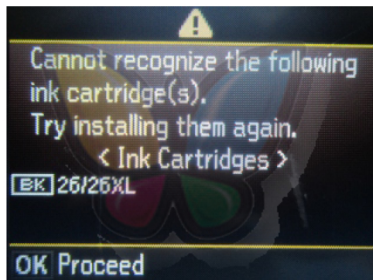


Reset the CHIP-SET:

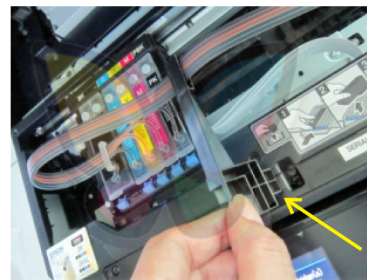


1- When you see this message press "OK".

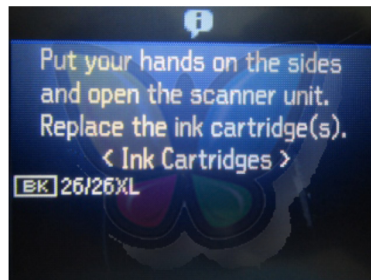

2- Open the printer door, remove the door sensor, wait until cartridges come to the change position.




3- JUST unclick the cartridges which shows it's empty. Make sure cartridge doesn't have any connection with the point.

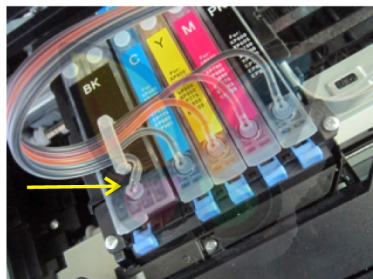


4- After 3 sec insert it




5- Re-install the door sensor

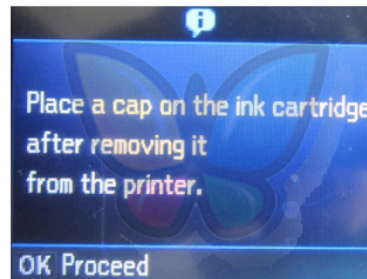


6- Press "OK"

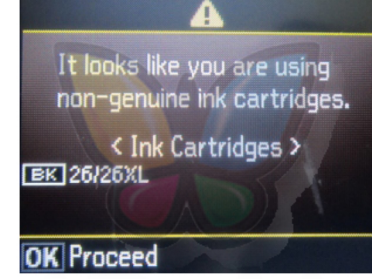


7- Press "OK"

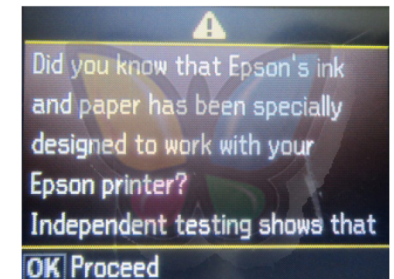


8- Press "OK"

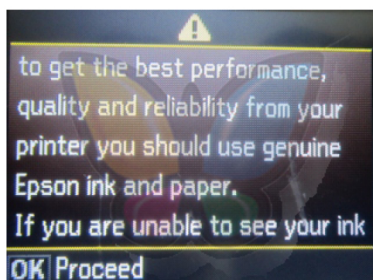

9- Press "OK"

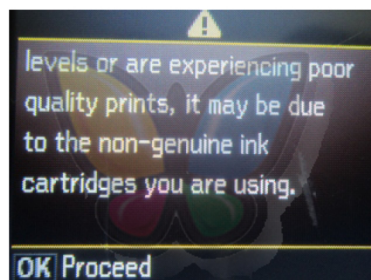

10- Press "OK"

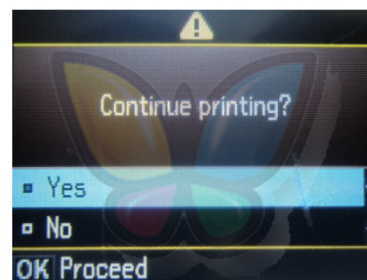

11- Press "OK"

Attention:

1- Before using this system make sure your printer is printing all colours.

2- If you don't want to use for long-term and for transportation, close all the plugs.

3- If you want to remove the cartridges, first remove the Door-sensor.

4- For more information please contact us on
02-80655614 / 1300-213-589
info@continuousinksupplysystem.com.au