



Tel: 02 80655614
1300 213 589
www.mir-aus.com.au
info@mir-aus.com

A+B INK CARTRIDGES FOR EPSON PRINTERS INSTALLATION INSTRUCTIONS



This version of the refillable cartridges comes with auto reset chipset. You just Need to fill the “B” part and print! the whole operation is very easy. It’s really an Effective tool to save your money.

List of steps for quick reference

- Step 1: Check your printer and inks you have used before for compatibility
With AB ink cartridges
- Step 2: Remove chip box (part A of the cartridge) from the ink box
(part B of the cartridge)
- Step 3: Remove the clear plug and the colour plug from part B
- Step 4: Fill in part B with 10-12 millilitres of ink
- Step 5: Put back the ink plug only and re-join part A and part B together
- Step 6: Insert the cartridge into the printer, exactly as you would for your
Original cartridges

Step 1: Easy separation of Part A from Part B

Hold the whole cartridge upright using your thumb and index fingers. You will be touching only part A if you will hold the cartridge exactly as Shown in the image. You should be able to see both of the plugs on the Upper surface of the cartridge with the chip set facing away from you. Now Place your other thumb on the plugs and your other index finger on the Bottom of the cartridge to hold part B . Pull part B away from part A gently And the two pieces should come apart very easily. If this does not happen, Verify the position of your fingers with the images.



Step 2: Removing plugs from part B

Holding the cartridge upright, two plugs should be visible. One plug is translucent This is the clear plug. This should be removed and needs to be re-inserted only if You are sending the cartridge away or expect the cartridge to be subjected to Excessive movement. The second plug is colourful and needs to be re-inserted After the cartridge is filled with ink. To unplug, put on latex gloves and pull the plug Gently while holding the cartridge firmly in upright position.





Step 3: Filling-in part B with ink

It is advised to wear an apron and latex gloves while rendering step 4. Hold part B In upright position. Fill in the syringe with ink from the ink container. Insert the Syringe needle tip into the hole which was blocked by the coloured plug (the hole Is on part B, DO NOT pierce the coloured plug). Discharge ink slowly from the Syringe into the cartridge to avoid spillage and splashing of ink,. Be careful not To insert the syringe too deeply into the part B as this can lead to leaking of ink.



Step 4: Re-join part A and part B together

Simply put part A and B close to each other and make sure the contours of the two parts match and gently push them together.

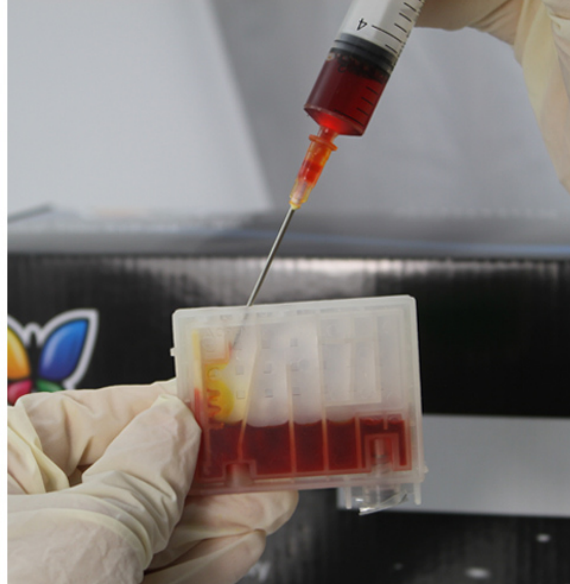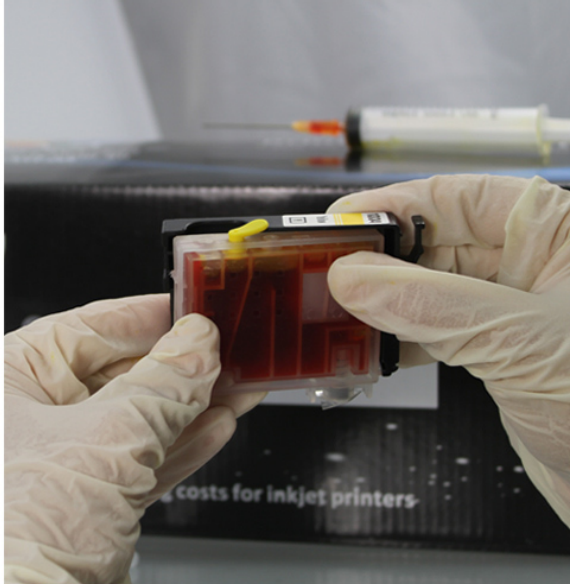

- ① Do not pierce the plugs with the needle. Keep the clear plug (air plug) for Later use or to replace the coloured plug if necessary.
- ② There is a clear-plastic seal on the bottom of the cartridge. Do not attempt To pierce or remove this seal. It will be pierced upon insertion into the printer Automatically.
- ③ Try not to touch the chip set. Grease from the finger tips may render the Chip set unfunctional.
- ④ Removing the AB ink cartridge from the printer will reset the chip set even If the cartridge still contains some ink. There will be no need to remove the AB Ink cartridges from the printer unless your printer prompts you to do so. If you remove the cartridge for any reason you will have to re-fill the cartridge With ink prior to re-inserting it back into the printer, otherwise your printer will Suppose that your cartridge is new and will treat it as a full cartridge, leading To air bubbles penetrating into your printer head.

**YOU ARE NOW READY TO PRINT WITH
MIR-AUS REFILLABLE CARTRIDGES!**

**For more information and technical support please contact us at any time.
02-80655614 / 1300-213-589**