



Tel: 02 8003 7508
1300 213 589
www.mir-aus.com
info@mir-aus.com

INSTALLATION INSTRUCTIONS FOR EPSON PRINTER



1. Not drinkable, keep it out of reach of children.
2. Avoid exposure to direct sunshine and don't keep it at high or freezing temperatures.
3. Avoid knocks and bumps.
4. Please avoid taking out the cartridges after installing the CIS ink system, where possible.
5. This product is designed to operate with the temperature of 10-40°C.
6. The CIS ink system has passed strict compatibility checks, so we suggest using our ink and cartridges to maintain printer quality.
7. Mixing two different brands of inks into the CIS ink system is not recommended.
8. Keep the ink tanks and printer at the same level. Do not place the tanks higher or lower than their printer.

FLY CISS

STEP ONE

Please open all small plugs
Fly CISS has a 2 separate Parts.

- ✓ Reserve tank (Big part)
- ✓ Air balance (Narrow part)

When you start to use a CISS first You must crate air balance inside your tank. Please see below photos.

Open
small plug

No ink
here



CLOSE ALL PLUG



CLOSE ALL PLUG



ALL TIME
OPEN ONLY SMALL PLUG





MBOX CISS

STEP ONE

When you start to use a CISS first You must crate air balance inside your tank. Please see below photos.

OPEN THE COVER

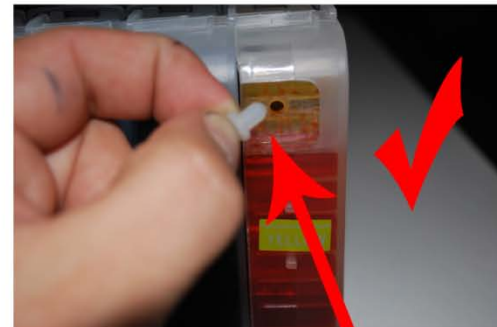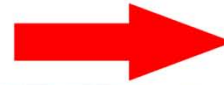

Ink level


Remove all plugs



CISS

INSTALLATION INSTRUCTIONS NEXT STEP

- 1 Remove ink cartridge holder lid and previous ink cartridges
With printer powered on, press the 'change cartridge' button.
When ink cartridge holder is in the 'change' position, remove the power cord from the printer.

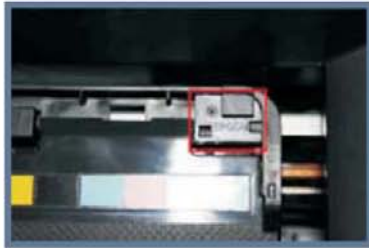



- 2 Place flat-edged screwdriver into the slit of the retaining clip marked 'ENP logo'. Push down slowly until clip disengages and remove clip.
Remove the lid, then remove all prior ink cartridges
Printer is now ready for installation of the ink System



CISS

INSTALLATION INSTRUCTIONS NEXT STEP

- ③ Install the ink System
Manually move ink cartridge holder to the left.
Install the ink system component into the left side of the printer frame, through the frame divider and place it to the right of printer as shown above.
Move ink cartridge holder back to original 'change' cartridge position

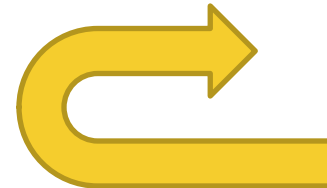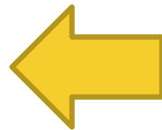



Ink cartridge holder



CISS

INSTALLATION INSTRUCTIONS NEXT STEP

- 4 Looking into the printer from above, install support clip as shown, affixing it at the edge of the white metal strip. Install the support clip as the pictures

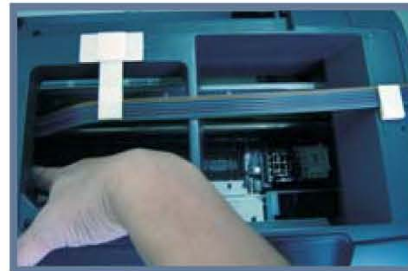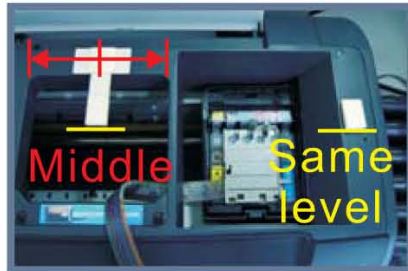

CISS

INSTALLATION INSTRUCTIONS NEXT STEP

- 5 Clip the tube
slide the tube to the right as far as possible,
making sure the tube can be straight.





C79/C90/C91/C92/D78/D92



R270/R260/R265/R390/RX590/RX580/RX595/RX680



R280/R285/R290/R380



C110/C120/D120



CX3900/CX4900/CX5500/CX5600/CX5900/
CX7300/CX8300/CX7400/CX5505/DX4400/DX7400




1390/1400/1410



CISS

INSTALLATION INSTRUCTIONS RESET CARTRIDGES

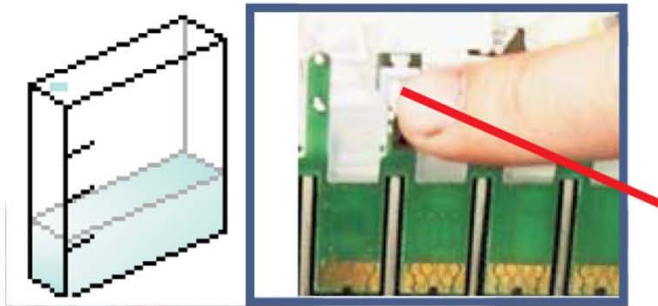

The ink will be showed less and less when printing, as the original cartridges. At last ,the computer will tell you to replace cartridge . **Keep the power, open the cover of printer, do not need to remove the CIS cartridges** , then press the button on the cartridge for 1 times, and restart the printer for 1 times, ok.



MIR-AUS

Tel: 02 8003 7508

1300 213 589

www.mir-aus.com

info@mir-aus.com

