





Tel: 02 80655614
1300 213 589
www.mir-aus.com.au
info@mir-aus.com

REFILLABLE CARTRIDGES INSTALLATION INSTRUCTIONS FOR BROTHER PRINTERS LC 233






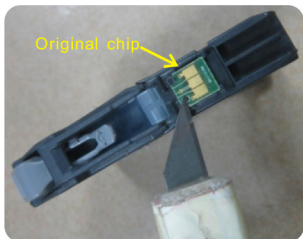

1. Take the original chip from The Original cartridges.

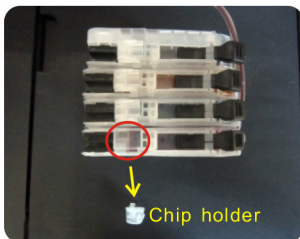

2. Take out the chip holder from the CISS Cartridges.

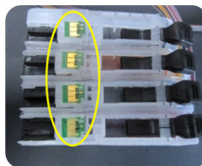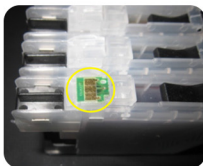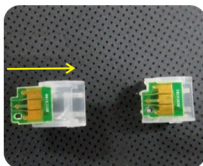


3. Installing the chip missing angle to the lack of angle and Install the chip Back to cartridge. Use the same way to install all chips



6. Use chip reseter to reset the original chipset, when light turns to green From red is ready to use.

Cartridge refilling

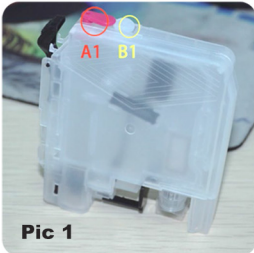


Pic 1

2) Open 2 holes on top part of the cartridge (Pic 2) The hole A1 is for refilling. During printing the refilling hole should be always closed. The hole B1 is air hole. After refilling, during printing this hole should be left **OPEN**.




Pic 2

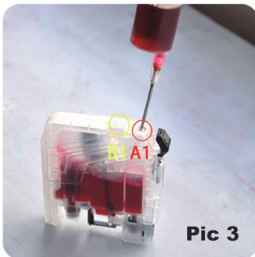

Pic 3

3) Use a syringe of respective color and put A needle on it for refilling hole A1 (Pic 3).

4) Fill necessary volume of ink, dash-dot line (Pic 4). Visually control cartridge refilling Through its wall. Close filling hole A1 with A cap, hole B1 leave open.

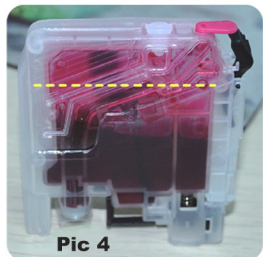

Pic 4



5) Inside each cartridge is a float that is Responsible for ink availability inside Cartridge, Before cartridge installation in Printer make sure the float is in Position Of Full cartridge (Pic 5).

6) When ink in cartridge gets empty, the float Comes in position empty cartridge (Pic 6) And printer shows the Empty cartridge Message.



7) Put a set of refillable cartridges in printer. Do not remove cover from the Cartridge nozzle, during installation the printer needle punches it.

8) Wait until all operations are done by printer (MFU) and until the printing device Is ready to work. If printer (MFU) does not recognize cartridges, please pull out Cartridges and make sure the float is in position of Full cartridge and put The cartridges back in printer.

9) With help of printer (MFU) software, please make 2-3 nozzles cleaning, after Print nozzles test and make sure all nozzles print well. If some nozzles do not Print leave a printer for 5-10 hour and over this time the excessive air comes Out and pressure inside cartridge stabilizes.

10) For cartridge refilling. Pull out cartridge and open refilling hole A1. Repeat operations.

11) For transportation and storage of refillable cartridges. It is necessary To close both refilling and air holes.