



MIR-AUS®

MIR PRESS
Digital Transfer Solution

Tel: +61 2 8065 5614
www.mir-aus.com.au
info@mir-aus.com.au

Digital Plate Heat Press Manual


PIATTO PT-15



CONTENTS

| | | |
|------|--|-----|
| I. | Assembly Drawing | 2 |
| II. | Technical Parameters | 2 |
| III. | Operation Process | 3-4 |
| IV. | Maintenance | 5 |
| V. | Trouble Shooting For Transfer Print Quality..... | 5 |
| VI. | Circuit Diagram | 6 |
| VII. | Explosion View | 7 |

I. Assembly Drawing

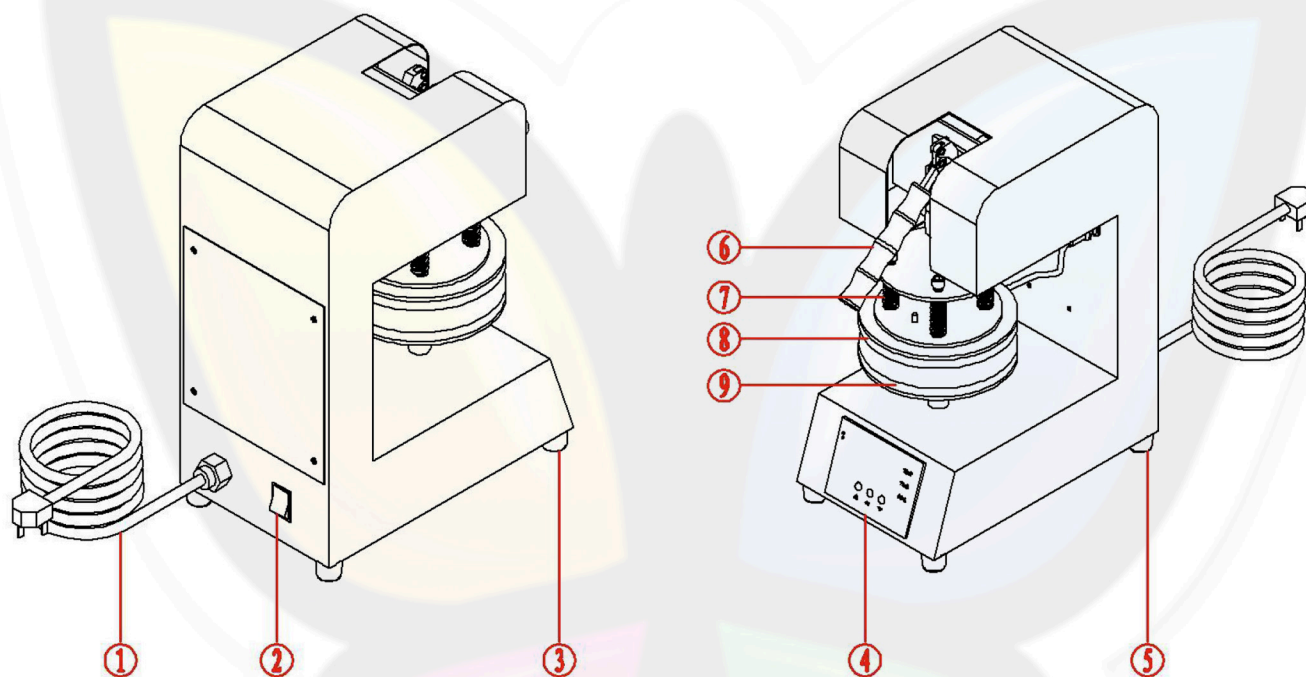









- | | | |
|---------------------|--------------------|------------------|
| ①Power Cord | ②Power Switch | ③Rubber Foot |
| ④Digital Controller | ⑤Rubber Foot | ⑥Handle Bar Grip |
| ⑦Compressed Spring | ⑧Plate Heat Platen | ⑨Under Plate |

II. Technical Parameters










1. Model No.: PIATTO PT-15
2. Machine Size: 478*180*378mm
3. Plate Platen Size: Dia 12.6cm or 15.2cm
4. Printable Articles Max Size: OZ155*10mm
5. Voltage: 220v/1Phase/120v/1Phase
6. Power: 1.8kw/1.2kw
7. Recommend Setting: 30~280s; 180~200°C
Time Range: 0~999s
Maximum Temp: 225 C.
8. Packing Size: 600*600*300mm
9. Gross weight: 15kg

III. Operation Process

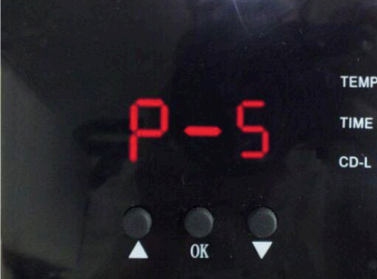1. Set temperature required

| | | |
|---|---|---|
|  |  |  |
| <p>Turn on power switch, temperature light is ON. The digital display shows</p>  | <p>Press  button, the  light is on (C denotes Celsius). Press arrows “△” or “▽” to select “°C” or “°F” (F denotes Fahrenheit) according to your habits.</p> | <p>Press  button, the temp  light is on. Select with arrows the temperature according to different transfer material (Normally 180°C~200°C)</p> |


2. Set time required

| | | |
|---|---|---|
|  |  |  |
| <p>Press  button after temperature setting and the  time light is on. Select with arrows the time according to different transfer material.</p> | <p>Press  button after time setting; the display shows the temperature starts to rise. “CD-L” shows the time counting down during your transfer.</p> | <p>If there is a difference between the actual temperature and temperature shows on the controller, you can use P5 mode to calibrate the difference.</p> <p>For example, when actual heat platen temperature is 180 °C but the display shows 200°C, press  button for 5 seconds to enter the P5 mode. When enter P5 mode, press arrows button “△” to set to 200, and then press  button again for 5 seconds return to operation mode.</p> <p>In the contrast, when actual heat platen temperature is 200 °C but the display shows 180°C, press arrows button “▽” to set to -20, and then press  button 5 seconds return to operation mode</p> |

3. Printing methods

- Step 1:** Make sure the cord is connected well to the wall socket. Place the object (i.e. T-shirt) on press bed, and transfer paper with images facing down the object, adjust pressure to your requirement, and turn on the power.
- Step 2:** Set the temperature and time required, then temperature starts to rise.
- Step 3:** When the temperature rises to the setting temperature, the buzzer sends out sounds; then close down heat platen (meantime the sounds stop) and starts to transfer.
- Step 4:** Then the time counter is on, once time is up, the upper heat platen will auto open and swing away to another side automatically.
- Step 5:** Consult the Transfer Paper instructions on whether to peel cold or hot, Here are suggested Pressing time guidelines for different transfer paper.
- Ink-Jet Transfer Paper (fabric) 14-18 seconds
Laser Copier/Printer Transfer Paper (fabric) 18-25 seconds
Sublimation Transfers (onto Fabrics) 25-30 seconds
Sublimation Transfers (onto FR-Plastic/Woods) 60-70 seconds

4. Recommendations:

- 1) Ceramic tile transfer: (Mugs & Plates transfer is similar)
Set temperature: 180°C.
Set time: 15 seconds
 - 2) T-shirt transfer:
Set temperature: 180°C.
Set time: (chemical fiber use for sublimation transfer paper: 30-50seconds; pure cotton use for T-shirt transfer paper: 10-20seconds)
- step 6:** When the temperature rises to the set temperature, the buzzer sends out a sound; then close down heat platen(meantime the sounds stop) and starts to transfer.
- step 7:** Time is counting down; once time is up,the buzzer will send out a sound again, the heat platen will open automatically (meantime the sounds stop).
- Step 8:** Work finish and take out the cap. If you want to print on another cap, press  button and confirm the time and temperature set as last time, then repeat above process.
- NOTE:**
- 1) Please switch off the machine and unplug the power cord when the machine is not in use.
 - 2) The heat platen will cool down to the room temperature, if heat press stays un-use for more than 30 minutes.
 - 3) The heat-releasing fan will automatically starts when the temperature of heat platen reaches 80 degree C (176 degree F). It helps to reduce the temperature of electrical parts and prolong the service life of them.
 - 4) For better maintenance of heat press, the maximum setting temperature is 210 degrees C (410 degrees F).
 - 5) To avoid re-heating the first transfer when printing double sided T-Shirts, insert a sheet of cardboard in between the shirt, adjust the height to less pressure, then press.
 - 6) Heat platen may pivot slightly back and forth rotationally. This is due to movement allowance within the clamp assembly, and is normal.

IV. Maintenance

1. No action after turn on the machine

- 1). Check the plug whether it connects well or whether it is broken.
- 2). Check the power switch or digital controller whether it is broken.
- 3). Check the fuse whether it has been burnt out.
- 4). Indicating light is on, but no display on screen, check the 5 cable of Railway transformer. If it's loosening, showing the problem is poor connection. If they connects well, showing that the Transformer is faulty.

2. The display screen are working well, but no temperature increasing on the heat platen.

- 1). Check whether the thermocouple of the heat platen touches well. If the thermocouple is loose, the display will show 255 and machine keeps beeping.
- 2). Check if the indicating light of solid-state relay is on, if not, check if the relay or digital controller is broken.
- 3). If you already changed the new solid-state relay but the heat platen still can't heating up, check if the heat platen is faulty or the heat platen's power cable is loose, need to change by new heat platen.

3. The heat platen works well, but suddenly the display screen show 255°C.

- 1). Check whether the thermocouple of the heat platen touches well.
- 2). If the thermocouple touches well but still show 255°C, then it is faulty.

4. The machine is heating during 0~180°C, but display number jumps to above 200°C or 300°C suddenly, or the numbers on display jumps irregularly.

- 1). Check whether the thermocouple of the heat platen touches well.
- 2). If the thermocouple is good, It shows that the program of digital controller is broken, which namely IC or is broken, need to change by new controller.

5. The temperature is out of control: Set 180°C, but the actual temperature is above 200°C.

- 1). It means the solid-state relay is broken, out of control, need to change the relay.
- 2). Or the digital controller is faulty and it keeps conveying electric to relay, need to change controller.

6. The setting temp and time becomes abnormal after exchange the heat platen

- 1). Please reset the temp and time according the operation process manual.


7. Other notice

- 1). In order to prolong the machine service life, please add the lubrication oil regularly on the joints.
- 2). In order to keep the heat platen's good transfer effect, you need to protect the heat platen carefully whenever you are using it or not.
- 3). Please keep the machine in dry place.
- 4). If you are not able to solve the electrical parts problem, please kindly contact the supplier and get technical support.

V. Trouble shooting for transfer print quality

1. If the print color is pale: the temperature is too low / the pressure is not correct / or not pressed long enough.
2. If the print color is too brown or the transfer paper is almost burnt: reduce the setting temperature
3. If the print is blurring: too much transfer time causes proliferation.
4. If print color is different/ partial transfer effect is not good enough: the pressure is not enough / or not pressed long enough / or poor quality transfer paper.
5. If transfer paper stick to the object after transfer: the temperature is too high/ or poor quality printing ink.

VI. Circuit Diagram

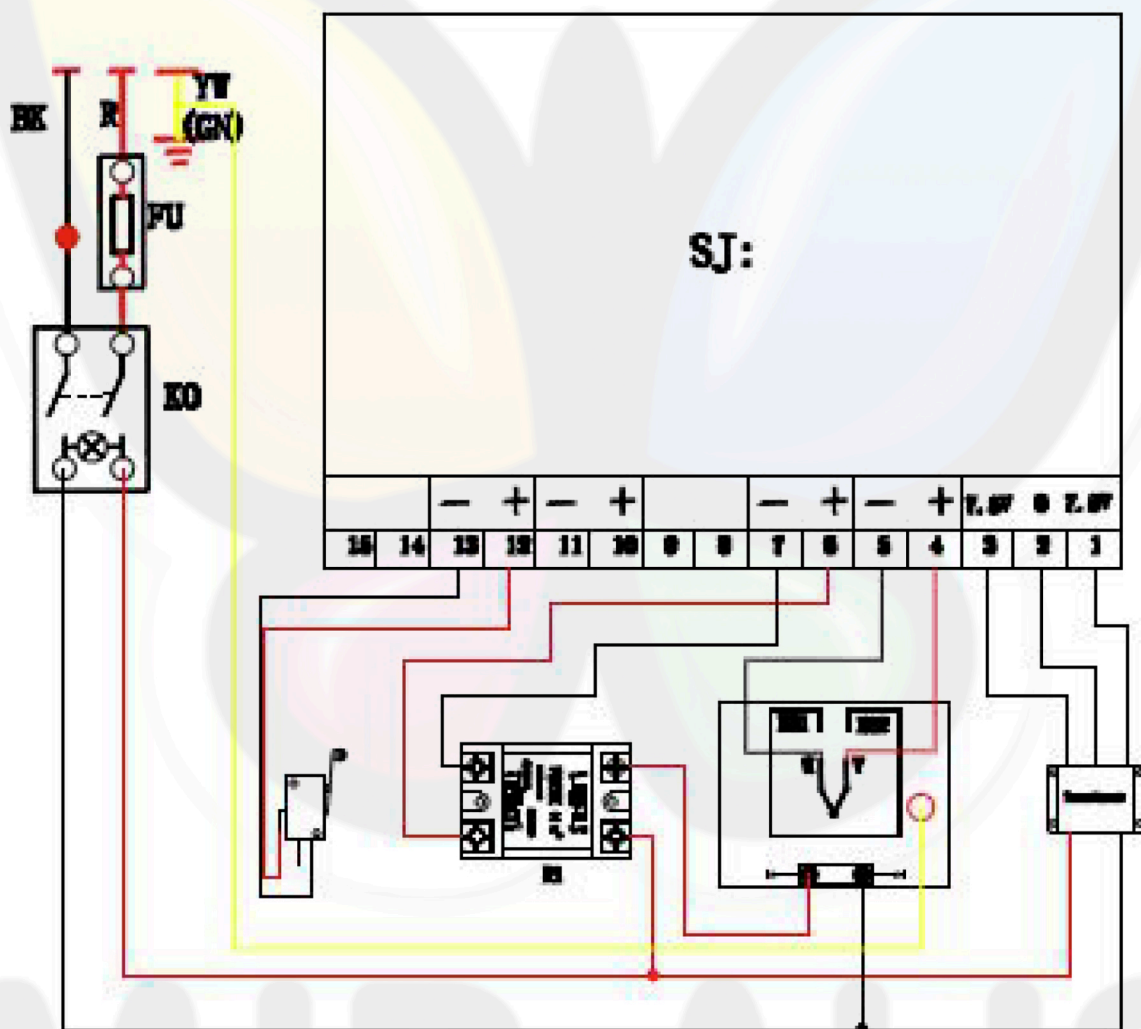

Ko.: Power Switch

R1: Relay


FU: Fuse

EH1 EH2: Heating Pipe

T: Transformer

SJ: Digital Controller

VII. Explosion view

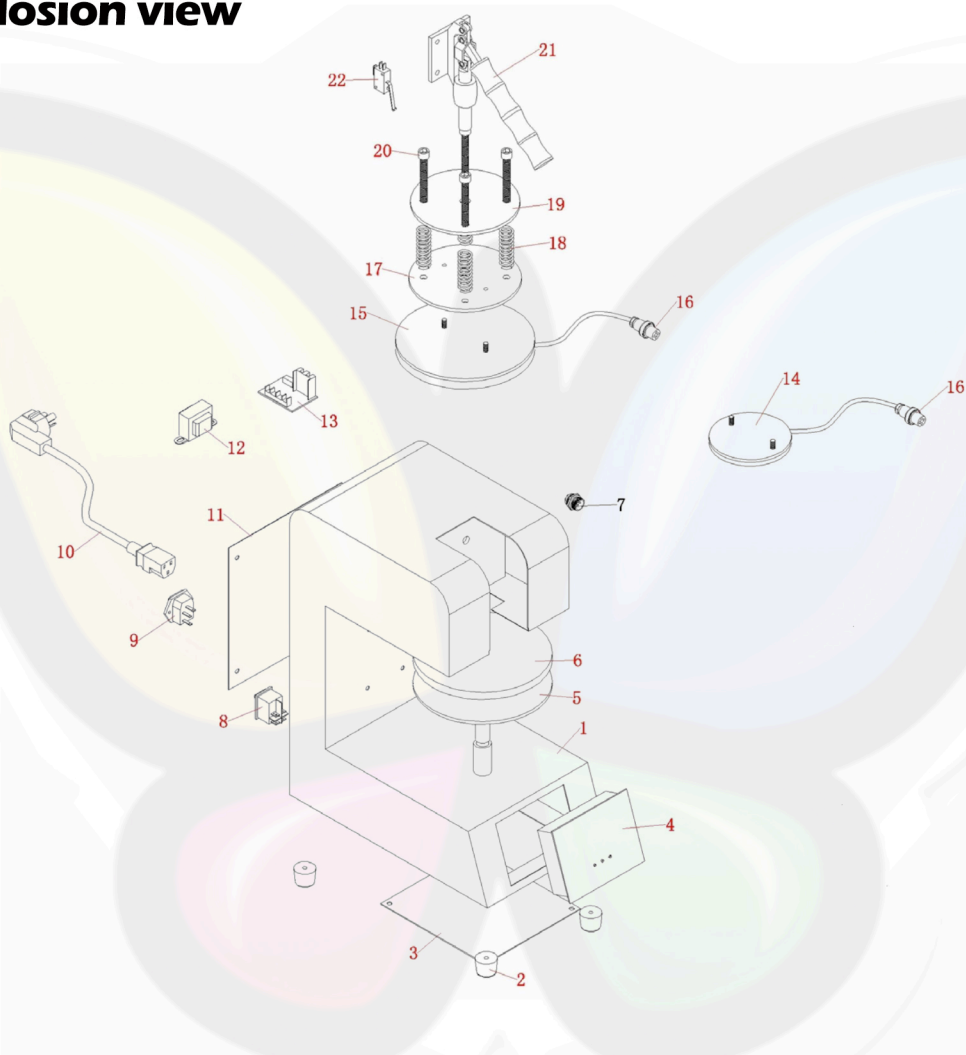

| No. | Part Name | Qty |
|-----|--------------------------|-----|
| 1 | Machine Frame | 1 |
| 2 | Rubber Foot | 4 |
| 3 | Under Connecting Plate | 1 |
| 4 | GY-04 Digital Controller | 1 |
| 5 | Under Plate | 1 |
| 6 | Plate Heat Platen | 1 |
| 7 | Air Socket | 1 |
| 8 | Power Switch | 1 |
| 9 | Power Socket | 1 |
| 10 | Power Cord | 1 |
| 11 | Back Cover | 1 |

| | | |
|----|-------------------------|--|
| 12 | Transformer | |
| 13 | Relay | |
| 14 | 5" Plate Heat Platen | |
| 15 | 6" Plate Heat Platen | |
| 16 | Male Socket | |
| 17 | Heat Platen Connector | |
| 18 | Compression Spring | |
| 19 | Upper Plate Adapter | |
| 20 | Inside Hexagonal Screws | |
| 21 | Handle Bar Grip | |
| 22 | Limit switch | |