



**Tel: 02 80655614
1300 213 589
www.mir-aus.com.au
info@mir-aus.com**


INSTALLATION INSTRUCTIONS FOR EPSON 273 / 277 REFILLABLE CARTRIDGES

INSTALLATION INSTRUCTIONS FOR EPSON 273 / 277 REFILLABLE CARTRIDGES


This version of the refillable cartridges comes with refilled cartridges and Auto reset chips. You just need to fill the cartridges and print! The whole Operation is very easy. It's really an effective tool to save your money.

How to refill the Epson inkjet Printer cartridges:

1 - Remove the air-seal tape and ink Plug (colored rubberplug matching the Ink color).

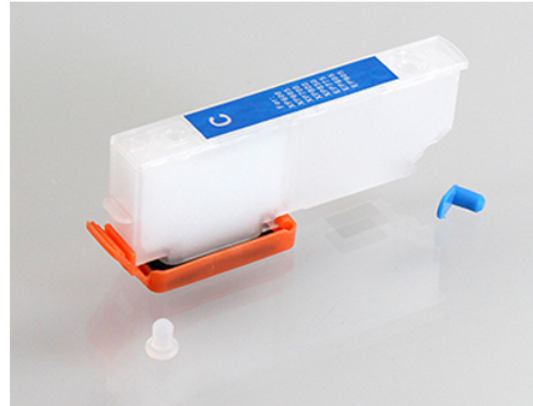

2 - Each cartridge contains a white Sponge. Use a syringe to fill in the Cartridge with 10-12 milliliters of ink. When filling/refilling the cartridge with Ink, allow some time for the sponge to Absorb ink, then, add more ink to the Cartridge to compensate for the amount Absorbed by the sponge.

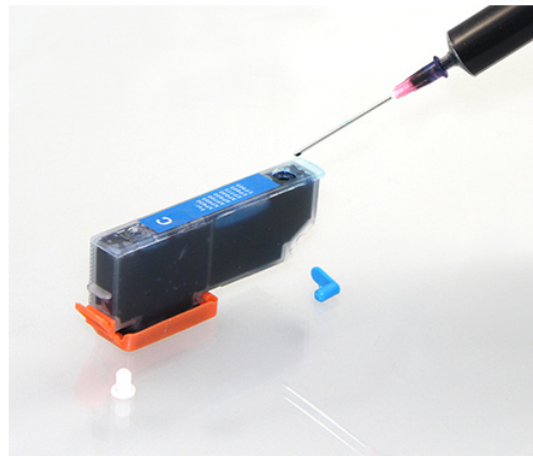

3 - Re-insert the colored ink plug into the Ink-refill hole.




Please note: After install the refillable cartridges, never remove the cartridge until printer said that cartridge it's empty.

(if you remove it before that message, printer will confuse.)

Same as original cartridges you NEVER change the cartridge(s) when you have "ink is running low message" with a new original cartridge.

"A" Reset point

**"B" You can NOT reset the cartridge,
you have to wait until printer says cartridge is empty
(never try to reset the cartridge in this point)**

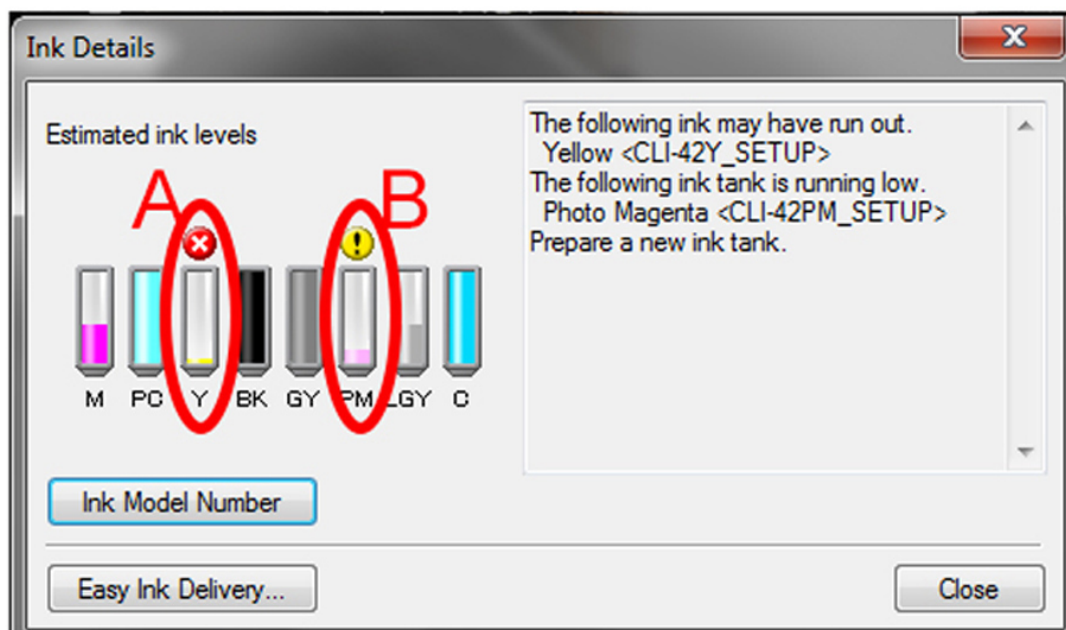

Attention:

1. Keep out of reach of children. Seek medical advice if taken.
2. Avoid exposure to direct sunshine and don't keep it at high or Freezing temperatures.
3. Avoid Knocks and bumps.
4. This product is designed to operate within 10-40 degrees Celsius.
5. The refillable cartridges has passed strict compatibility check, so we suggest Using our ink and cartridges to maintain printer quality.
6. Mixing two different brands of ink into the refillable cartridges is not recommended

**YOU ARE NOW READY TO PRINT WITH
MIR-AUS REFILLABLE CARTRIDGES!**

**For more information and technical support
Please contact us at any time.
02-80655614 / 1300-213-589**